

THE OUTDOOR DEPT

— EST. 2016 —

Outdoor Fire Pit

Important safety information

Before use

- This fire pit is designed for outdoor use only.
- Be sure to check your local fire regulations before use.
- Position the fire pit on a flat stable and non-flammable surface. Surfaces such as decorative bark, leaves, wood chips and wood decks can be a hazard. Plastic decking may be damaged from embers.
- Leave a 2 meter area around the fire pit clear from non-flammable items.
- Do not use white spirits, petrol, lighter fluids, alcohol etc to light the fire as the rapid increase in temperature could damage the fire pit.
- This product is only suitable for use with untreated wood and logs. Do not use charcoal.
- Never overload the fire pit or allow wood to hang out over the edges.

During use

- Never leave the fire unattended.
- The fire pit will get hot during use and after use, so take care with children and pets.
- Do not handle or move the fire pit when lit or hot. This may cause burns. Always ensure the unit has completely cooled before moving.

Care instructions

- If using an outdoor cover, only position the cover once the fire has died and the unit has completely cooled.
- Let the fire die out naturally or douse with sand. Do not extinguish the fire with water as this can damage the fire pit.
- Ensure that rain does not collect in the bottom of the heater. Cover or store the fire pit when not in use.
- The steel finish will age and discolour naturally for first use. Some slight flexing or warping of the metal may occur, this is normal and is to be expected.