

# ACCURA

## ARTEMIS ELECTRONIC KITCHEN SCALE

### ACC5034 OPERATING INSTRUCTIONS

Thank you for choosing the Accura Artemis Electronic Kitchen Scale. To ensure proper operation and to maintain the lifespan and the utmost accuracy of the scale, please read these instructions carefully before use.

### KEY FEATURES

- Capacity: 5kg/11lbs
- Graduation: 1ml/1g/0.1oz
- Units: ml,g,lb,oz,fl\*oz
- Tare function
- Auto off function

### OPERATION INSTRUCTIONS

- Use a Phillips cross-head screwdriver to open the battery lid at the back of the scale, and remove the plastic isolators on the batteries.
- Open the battery door at the back of the scale, and remove the plastic isolators on the batteries.
- Place scale on a firm, flat surface to use. A kitchen bench is ideal.
- If using a bowl place onto the scale before switching on.
- Press the "On/Off/Tare" key to turn the scale on.
- Press the "Unit" key to select your preferred unit of measure.
- For the most accurate weight ensure the item is in the middle of the platform
- If measuring multiple ingredients in the one bowl press the "On/Off/Tare" key between each new ingredient. Tare lets you reset readout to zero before adding other ingredient to the bowl. This is useful when a recipe requires multiple ingredients to be added to same bowl. Add additional ingredients slowly and carefully while keeping an eye on the readout when using the tare function as if too much of a subsequent ingredient is added, it will be difficult to accurately remove excess weight added to combined ingredients in bowl. A negative weight will appear if the weight is removed when using Tare function.
- If the screen reads "Err" the scale is overloaded, please remove the weight and reset the scale to zero by pressing the "On/Off/Tare" key.
- A negative weight will appear if the weight is removed when using Tare function.
- The scale will power off automatically after 2 minutes seconds of non-use.

### CARE

- If the screen reads "Lo" the scale will turn off after 1 second; please replace the battery.
- Wipe the surface of the scale with a damp cloth and dry before and after each use.
- Do not immerse in water and do not use any detergents
- Do not leave the scale in a damp or steamy environment
- The scale is for domestic use only and is not legal for trade.
- If the scale is not being used for a long period, please remove the batteries.

### WARNING: KEEP BATTERIES OUT OF REACH OF CHILDREN.



- This product contains a button battery.
- Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the oesophagus.
- If you suspect your child has swallowed or inserted a button battery immediately call:
  - AUSTRALIA 24-hour Poison Information Centre on 131126
  - NEW ZEALAND 24-hour National Poison Centre on 0800 764 766
- Examine devices and make sure the battery compartment is correctly secured. Do not use if compartment is not secure.
- Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.
- Tell others about the risk associated with button batteries and how to keep their children safe.
- Visit [www.thebatterycontrolled.com.au](http://www.thebatterycontrolled.com.au) for more information on battery safety.

### DISTRIBUTED BY

Albi

Customer Care

87 Chifley Drive,

Preston Vic 3072

Phone: 03 9474 1300

Email: [albi@albi.com.au](mailto:albi@albi.com.au)