

DAVIS & WADDELL

D3635 Electric Milkshake Maker Operating Manual

Thank you for choosing the Davis & Waddell Electric Milkshake Maker. To ensure proper operation and to maintain the lifespan of your appliance, please read these instructions carefully before use.

1. Key Features


- Blend your favourite milkshake in seconds.
- Two speed function.
- Stainless steel cup and mixing stick.
- Tilting head.
- 12 month warranty.

2. Important Safety Instructions

When using electric appliances, especially when children are present basic safety precautions should always be followed, including the following:

- Read all the instructions before operating this appliance.
- Children should be supervised to ensure they do not play with the appliance.
- Do not immerse the motor base, plug or cord in water or any other liquid
- Unplug the appliance when not in use or being cleaned.
- Pull out from the power outlet by grasping the plug, never by the cord.
- Always check the integrity of the cord before use, if the cord or plug is damaged do not use.
- This appliance should be kept away from hot gas, heated oven, electric burner or any hot surface
- The appliance should always be used on a hard stable surface, such as table or benchtop.
- The appliance should always be operated with the mixing cup in place.
- Keep hands and utensils out of the mixer while blending to reduce the risk of severe injury.
- Do not fill the mixing cup more than 300ml before mixing; the volume of mixture will increase with blending.
- Do not use with hot ingredients.

- Do not attempt to use with solid food (eg. fruit) or food which is difficult to cut with a kitchen knife.
- If using ice, only use crushed ice, not ice cubes.
- Do not use appliance for more than 1 minute continuously. Leave the appliance switched off for at least 1 minute before using again.
- Do not use the appliance more than 5 times consecutively.
- Do not remove the mixing cup from the motor base until the motor has stopped.
- Do not use if the mixing cup is cracked or chipped.
- Take care when cleaning.
- This appliance is intended for household use, not commercial use.
- Store these instructions for future reference.

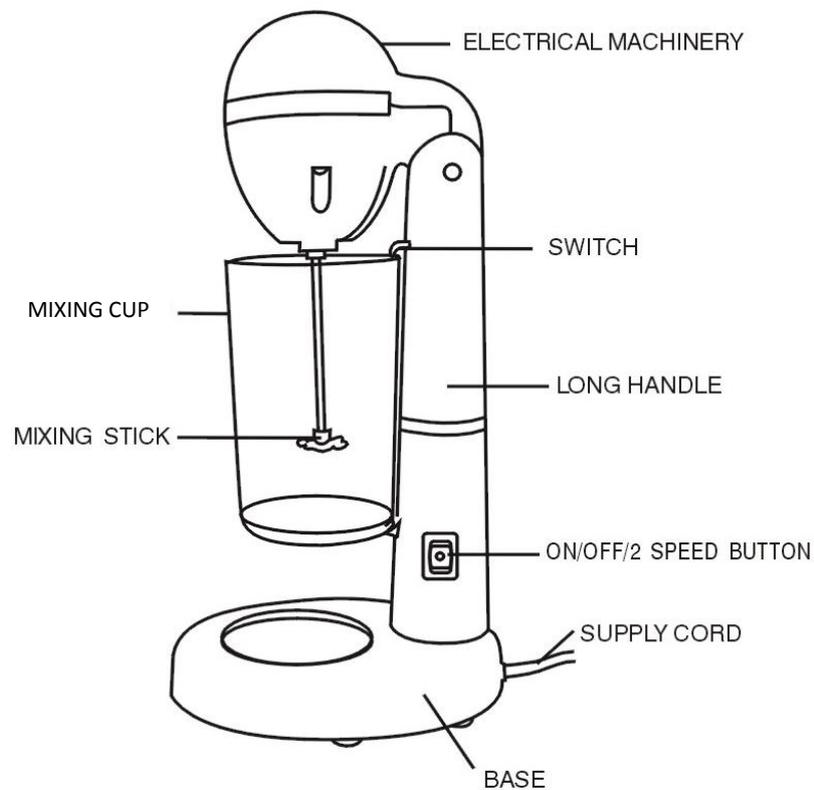

3. Operation Instructions

- Clean the appliance thoroughly before use.
- Do not fill the mixing cup more than 300mL before mixing as marked on the cup, do not use with hot liquids.
- To attach; tilt back the head, insert the cup under the mixing stick and slide it upwards to the switch and click into place on the lower mixing cup holder.
- The appliance will only operate when the mixing cup is in the correct position.
- Make sure the on-off switch (I-0-II) is in the "0" position before plugging the appliance into the socket.
- Plug in the appliance.
- Place the switch to "I", the appliance will begin to operate, after a few seconds you may switch to the high speed "II".
- Note: for milkshakes it is best to use speed "I".
- Do not operate the appliance for more than 1 minute continuously.
- When finished switch the on-off switch to "0".
- Unplug the appliance.
- To remove the mixing cup, tilt the mixer head back and slide the mixing cup off the mixing stick.
- Clean and allow the base unit to cool before storing.

NOTE: Always make sure the appliance is in the off "0" position before plugging it into the socket or removing the mixing cup after use.

4. To Clean

- Switch off the blender and unplug.
- Never immerse the power unit, cable or plug in water.
- The mixing cup is not dishwasher safe.
- Whenever possible, rinse parts immediately after processing to make clean-up easier.
- To clean the mixing stick and the mixing cup pour 300mL of warm, soapy water into the cup. Plug in the appliance.
- Set the switch to "I" and use for about 30 seconds.
- Turn off the appliance by switching the on-off to "0".
- Unplug the appliance, tilt the head back and remove the mixing cup.
- Repeat this process using clean water to rinse.
- Wipe the body of the unit with a damp cloth, after appliance has been unplugged. Do not use detergent or abrasives as these may scratch the surface.
- Allow all parts to dry thoroughly before storing.

5. Guarantee

If after following these instructions the Electric Milkshake Maker does not work, there may be a manufacturing problem. If this is the case, Albi guarantees this product for 1 year from the date of purchase. The full details of this guarantee can be found at www.albi.com.au or by calling (03) 9474 1300. In the event of such a problem you should return it to the place from which you bought it, WITH PROOF OF PURCHASE, in the form of a valid receipt. Damage through misuse will nullify this guarantee.

For any other advice please contact:

Customer Care

Albi

87 Chifley Drive,

Preston Vic 3072

Phone: 03 9474 1300

Email: albi@albi.com.au

Recipes

Classic Vanilla Milkshake

Ingredients

2-3 scoops vanilla ice cream

1/2 cup milk

1/2 tsp vanilla extract

Directions

Place all ingredients in the mixing cup and blend until mixture is smooth and frothy.

Chocolate Milkshake

Ingredients

1 scoop vanilla ice cream

1 tablespoon chocolate syrup

1 cup milk

¼ tsp vanilla extract

Directions

Place all ingredients in the mixing cup and blend until mixture is smooth and frothy.

Reduced-fat Banana Milkshake

Ingredients

1 cup reduced-fat milk

100g reduced-fat natural yoghurt

½ large banana, mashed

1 tsp Stevia Sweet

¼ tsp vanilla essence

Directions

Place all ingredients in the mixing cup and blend until mixture is smooth and frothy.